





FOR SUPER CUB50 (AA09), SUPER CUB110 (JA10/JA44)
HAZARD / PASSING FUNCTION BUILT-IN!
COUPLER ON! NO WIRING MODS REQUIRED!





## ~ PASSING (HEADLIGHT FLASHING) ~

Headlight flashes when pushing dimmer switch "Lo ≣O ".





## (PUSH CANCEL)

HOW TO FLASH HAZARD ~
Hazard switch is united with winker switch.



Switches winker from right to left continuously to turn on hazard flash !

\* It also works from left to right.



Switches winker from **right** to **left**, to turn on hazard flash.

It also works from left to rightAll 4 winkers flash.

**2**)

To turn off, push it just like winker.



\* Rear winkers also flash

## Kitaco Official YouTube Channel How to install L handle switch assy with

hazard is now on air !!

## SWITCH SET (HAZARD & PASSING)

Just exchange dimmer switch, winker switch & winker relay ! No wiring mods required ! Switch set to add hazard ! passing function to SUPER CUB 110 (JA10)

CODE	PRICE
756-1429200 <b>CHEK</b>	¥7,600
● COUPLER-ON ● HAZARD SWITCH / PASSING FUNCTION	

BUILT-IN! • FLASHER RELAY INCLUDED (NO WINKER BUZZER FUNCTION) WINKER RELAY SUSPENSION INCLUDED

APPLICATION SUPER CUB 110 (JA10) \*\* Pro, CROSS CUB NOT USABLE

\* Refer to Honda service manual when installing.



Just exchange dimmer switch, winker switch & winker relay ! No wiring mods required ! Switch set to add hazard / passing function to SUPER CUB 50 (AA09), SUPER CUB 110 (JA44)

CODE	PRICE
756-1439200 CILCK	¥7.000

● COUPLER-ON ● HAZARD SWITCH / PASSING FUNCTION
BUILT-IN! ● FLASHER RELAY INCLUDED (NO WINKER BUZZER
FUNCTION) WINKER RELAY SUSPENSION INCLUDED

APPLICATION SUPER CUB 50 (AA09), SUPER CUB 110 (JA44)

\* Refer to Honda service manual when installing.



