



## メーター系関連アイテム

### FOR AIR / FUEL SETTING! MUST-HAVE MULTI-MONITOR!

RENEWAL



VEHICLE : CT125 HUNTER CUB (JA55)  
HANDLE BRACE (SILVER) METER STAY



A multimeter required for measuring fuel settings in FI vehicles. In addition to A/F value and throttle opening, engine RPM and battery voltage can also be displayed simultaneously. Organic EL display with excellent visibility.

Includes 3 types of heater-less O<sub>2</sub> sensor harnesses



BAR GRAPH  
(top of monitor)

THROTTLE OPENING  
MAIN

Displays throttle opening from 0 to 100%

SUB MONITOR

AIR-FUEL RATIO (A/F) value  
MAIN

A/F value

SUB MONITOR

ENGINE RPM  
MAIN

Engine RPM

SUB MONITOR

Back to throttle opening

### NEW RISM (THROTTLE OPENING / O<sub>2</sub> / RPM MONITOR)

CODE	PRICE
752-6011100	¥28,000

- COUPLER-ON ● 3 TYPE OF HONDA O<sub>2</sub> SENSOR CONVERT HARNESS incl. ※ O<sub>2</sub> SENSOR USABLE (A/F SENSOR \* LAF SENSOR INCOMPATIBLE)
- MONITOR SIZE : W 71.5mm × H 39mm × T 14mm
- HARNESS LENGTH : 450mm ● HOOK & LOOP FASTENER incl.

#### APPLICATION

 

HONDA MINI (O<sub>2</sub> sensor equipped vehicle WITHOUT heater),  
**VEHICLES WITH KITACO I-MAP** ※ Heater model is NOT usable  
● FOLLOWING MODEL USABLE  
GROM (JC61/JC75 ~ JC92-1099999), MONKEY125 (JB02), CT125 · HUNTER CUB (JA55), MONKEY (F1)(AB27), APE50 (F1)(AC16/AC18), SUPER CUB (F1)(AA01) etc.

※ Visibility can be improved by using a separate handlebar brace and meter stay.


● Display functions

- \* Throttle opening (body sensor output voltage range 0 to 5V)
- \* Engine RPM (body sensor output pulse value range 1 to 99)
- \* Air-fuel ratio (A/F value) Battery voltage (accessory input voltage)

Turn on the power and the opening starts. "KITACO" → "RISM" and then turns to the throttle opening main setting.

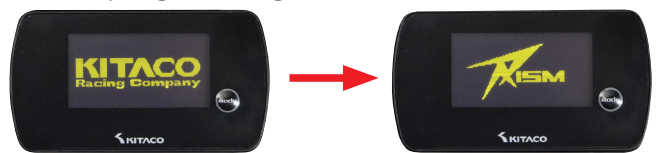


The bar graph increases or decreases according to the throttle opening, engine RPM, etc.

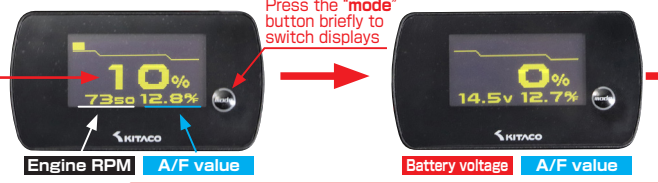

Press the "mode" button briefly to switch displays


Engine RPM A/F value

Battery voltage A/F value

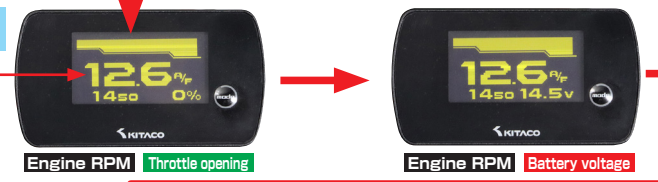

Engine RPM Throttle opening

Engine RPM Battery voltage

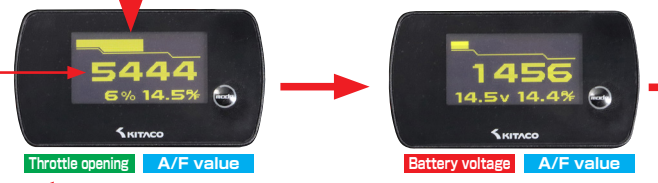

Throttle opening A/F value

Battery voltage A/F value

Battery voltage Battery voltage displays accessory input voltage.

### RECOMMENDED PARTS



METER STAY  
CODE : 0901-752-0010  
PRICE : ¥1,600



UNIVERSAL PLATE  
Tightens with mirror (φ10)  
CODE : SILVER / 0900-529-02200  
BLACK / 0900-529-02201  
RED / 0900-529-02202  
PRICE : ¥1,000  
※ φ 6 / φ 8 NOW ON SALE



HANDLE BRACE  
CODE : BLACK / 619-9010050  
SILVER / 619-9010060  
GOLD / 619-9010070  
PRICE : ¥8,000

### UNIVERSAL TYPE IS ALSO RELEASED!

RENEWAL



A multimeter required for measuring fuel settings in FI vehicles. In addition to A/F value and throttle opening, engine RPM and battery voltage can also be displayed simultaneously. Organic EL display with excellent visibility.

### NEW RISM (THROTTLE OPENING / O<sub>2</sub> / RPM MONITOR)

CODE	PRICE
752-6011000	¥24,000

- UNIVERSAL ● MONITOR SIZE : W 71.5mm × H 39mm × T 14mm
- HARNESS LENGTH : 1,000 mm ● HOOK & LOOP FASTENER incl.

APPLICATION O<sub>2</sub> SENSOR USABLE  
※ A/F SENSOR / LAF SENSOR NOT USABLE

※ Harness mods required.

※ Visibility can be improved by using a separate handlebar brace and meter stay.