[POWER PACK LIGHT] LIGHT BIG BORE KIT 164cc No. 1/2 SPEC |(POWER PACK LIGHT) φ 60 SILVER CYLINDER |(POWER PACK LIGHT) φ 60 BLACK CYLINDER CODE 230-1300010 230-1451010 APPLICATION MONKEY 125 (JB02) GROM (JC75) ATTENTION!

- Injection controller(i-map)(sold separately) and racing exhaust are required for maximum engine performance. Also, please change exhaust to racing, etc.
- Air/fuel setting is required for the parts combination that is not included in pre-installed map.
- Please use unleaded premium gasoline. Because of high compression, regular gasoline might cause of knocking, etc.
- Thank you for purchasing Kitaco product. Read and understand the instruction before installing.
- For installation, Various special tools are required.
- After installation, please use this instruction sheet for setting manual.
- *Keep this instruction sheet safe because repair parts do not have instruction sheet.

■ ATTENTION (MUST READ)

- This parts is made exclusive for racing use. Note that racing parts are not covered under warranty. Installed vehicles cannot ride the on general public road.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- i-map setting may need if other manufacturer's product is installed.
- Follow the instructions and install correctly. Do not modify the way which is not listed or it will cause damage and trouble.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding
- Change the engine oil to the new specified engine oil after you break in (about 100km). KITACO Specified Oil: elf MOTO 4 PRO TECH /PANOLIN STREET 4T RACE)
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Clean each parts by parts cleaner and use air duster to check whether the oil line is choked up.
- Oil the parts with engine oil when assembling.
- By installing this parts, the output characteristic is different from normal, please enhance the brake to match the power and improve steering stability. Please be careful of riding.
- Do not spark the plug out side of cylinder for spark check. It might cause of fire.
- Refer to the manufacturer service manual when installation.



his sheet is intended for the person who has basic nowledge for maintenance o not operate if you do not ave skill and knowledge.



Toxic, highly-volatile gasoline is used during operating. Be sure to ventilate the room. Do not operate for hours in a hermetically closed room.



FLAMMABLES Inflammable high gasoline is used during operation.



not touch the engine parts cylinder, crankcase, muffler, engine oil etc...) right after engine operatio Make sure to start the installation ifter the engine parts are completely



Wear insulated glove when checking the sparking outside the cylinder.

SPECIFICATIONS

REOUIRED TOOLS AND REPAIR PARTS

- DISPLACEMENT: 164cc [BORE] 60X [STROKE] 57.9 NORMAL SIZE
- COMPRESSION RATIO 11.1:1 (NORMAL 9.3:1)
- FUEL: UNLEADED PREMIUM GASOLINE
- VALVE CLEARANCE STANDARD NUMBER(COLD) IN VALVE: 0.10±0.02mm / EX VALVE: 0.17±0.02mm

- VARIOUS GENERAL TOOLS
- THICKNESS GAUGE(COMMERCIALY SOLD)
- UNIVERSAL HOLDER (HONDA GENUINE) PRODUCT CODE: 077725-0030000

3-8-13 NAGATA,HIGASHI-



	PACKING LIST () is 1SET QTY.					POWER PACK LIGHT 164cc				
FIGURE	147 11415		CODE	Q	ΓY	REMARK				
Α	HIGH CAM SHAFT	TYPE 2	300-1432010	x1	x1	No decompression feature				
В	ϕ 60 CYLINDER	BLACK	311-1444150	x1	l -	X Power pack included. □				
		SILVER	311-1444160	-	x1					
B1	OIL PASS GALLERY	BLACK	771-9000450	x1	-	T4/28.5mm				
		SILVER	771-9000460	-	x1					
B2	ALUMINUM SEALING WASHER	10mm	771-0500999	x4	x4					
В3	SEALING WASHER	6.5mm	70-092-14321	x1	x1	CAM CHAIN TENSIONER M6x18 BOLT				
B4	SEALING WASHER	8mm	70-090-14321	x1	x1	CAM CHAIN GUIDE ROLLER BOLT				
B5	UNION BOLT	RED /M10xP1.25	771-0900900	x2	x2					
С	PISTON KIT	LIGHT 164cc	350-1444100	x1	x1					
C1	φ 60 P I STON	LIGHT164cc	351-1444100	(x1)	(x1)					
C2	φ 60 PISTON RING	(0.8-0.8-1.5)	352-0006600	(x1)	(x1)					
C3	PISTON PIN	13x45	353-0001345	(x1)	(x1)					
C4	PISTON PIN CLIP	13mm	354-0000130	(x2)	(x2)					
D1	HEAD GASKET	φ 60	961-1432310	(x1)	(x1)					
D2	BASE GASKET		962-1432300	(x1)	(x1)					
Е	LARGE CAPACITY INJECTOR	x1.6	403-9000020	x1	x1	*Power pack included.				
-	i-MapCOUPLER ON+FB CANCELLE	R MONKEY 125 (JB02)	763-1300200	-	x1	Refer to other paper.				
		GROM (JC75)	763-1451200	x1	-					
	OPTION PARTS									
OP1	EX GASKET	H-06	70-963-11006	x1	x1					
OP2	TITANIUM NUT		303-1013711	x1	x1					


	OTHER REQUIRED PARTS (Please purchase products that sold separately.)									
		NAME		CODE	REMARK					
ELECT		PC INTERFACE CABLE	(Sold separately.)	763-0500900	For connecting to PC to make user					
SYS	SYSTEM				original map.					
coc	OLER	SUPER OIL COOLER KIT 3/5 ROW	(Sold separately.)	_	For GROM / MONKEY 125					
	OII	elf MOTO4 PRO TECH 5w40 1L	(Sold separately.)	968-2000021	Recommend engine oil.					
OII		PANOLIN STREET 4T RACE 10W50 1L	(Sold separately.)	968-2996001						
		ABOUT PRODUCT								

ATTENTION TO INJECTION CONTROLER (i-map)

● The pre-installed (set) i-map cannot deal with the processed intake/exhaust port and processed combustion chamber. Air/fuel setting is required for the parts combination that is not included in pre-installed map or combination with other manufacturer's product. In that case, please make original map on user setting map. *Computer, PC interface cable and facility for air fuel ratio is required to make original map

ABOUT CYLINDER OIL LINE

The right side of this big bore kit, there is by-pass type oil line. Remove the oil gallery, then install the oil nipple, therefore it is going to be oil line for oil cooler, etc.

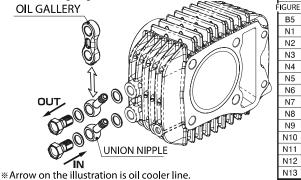


B5 ALMINUM BANJO (UNION) BOLT х2 15 N1 CYLINDER HEAD CAP NUT 8mm х4 24 N2 FLANGE BOLT M6x90 x2 10 N3 FLANGE NUT 8mm x2 27 L SIDE COVER BOLT M6x20 x2 10 N5 CAM SPROCKET BOLT M8x22 x1 27 N6 LOCKER ARM SET PLATE BOLT M6 × 12 x1 10 N7 CAM CHAIN GUIDE ROLLER PIN BOLT 10 x1 N8 INTAKE PIPE BOLT M6 × 30 x2 10 N9 INJECTOR MOUNTING BOLT x2 10 N10 OIL TEMPERATURE SENSOR M10 x1 14.5 10 N11 | FLANGE BOLT M6x14 x1 N12 TAPPET CAP BOLT M6 × 20 х4 N13 ADJUST SCREW LOCK NUT x2

TORQUE N • m (1kgf • m :9.80665N • m)

OTY N · m

NAME

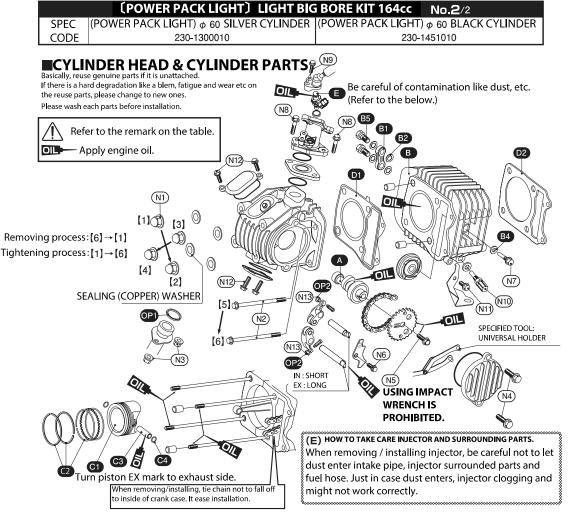


INSTALLING PISTON RING

Refer to the illustration to install. "POINT"

- Distribute the gap of the ring as shown in the illustration.
- Turn top ring and second ring mark to upward (head).
- There is not up and down to expander and side rail.

Parts dat	Parts data on illustration. (Install in numerical order				
FIGURE	NAME	QTY			
1	EXPANDER	× 1			
2/3	SIDE RAIL (same up and down.)	× 2			
4	SECOND RING (BLACK)	× 1			
5	TOP RING (WHITE)	× 1			

*Install piston turn EX mark to exhaust side.

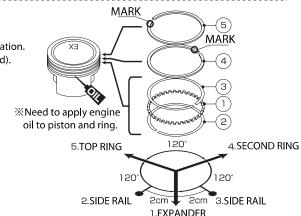

HOW TO REMOVE / INSTALL PISTON PIN CLIP

- 1) Sand pin clip by needle-nose pliers, then haul pin clip joint in piston joint.
- Remove pin clip by sanding joint by needle-nose pliers and pull inside, then pull outside.
- 3) Rotate slowly to remove pin clip.

*Pin clip might pop off, please work carefully.

• Pin clip installation is in reverse order to removing.

HOW TO INSTALL/REMOVE CAM SHAFT SPROCKET REMOVE Remove cam sprocket cover, O ring, crank shaft hole

cap, timing hole cap and cam chain tensioner flange bolt(M6x18).

INSTALL

- Make camshaft to compression top dead center position, hang chain to cam sprocket with O mark of the cam sprocket matches cylinder head matching mark, then install temporarily to camshaft.
- 2) Rotate crank shaft counterclockwise, match the fly wheel matching mark "T" and crank case matching mark, then check cam sprocket "O" mark matches cylinder head matching mark while compression top dead center position. If it does not match, install cam sprocket again.
- 3) Fix cam sprocket by using universal holder(specified tool), tighten cam sprocket bolt.
- 4) Inject 4.0cc engine oil from flange bolt (M6x18) hole to push rod, tighten with new sealing washer and bolt.

PIN CLIP

SETTING VALVE CLEARANCE

1) Rotate crankshaft counterclockwise, match fly wheel "T" mark to crank case matching mark. move locker arm to check piston position is compression top dead center position. (It can check by rocker arm sagging. If there is no play, rotate crank shaft again.)
2) Insert thickness gauge between adjust screw and valve stem, check out exhaust valve clearance.

VALVE CLEARANCE STANDARD VALUE (COLD)

IN intake side $: 0.10 \pm 0.02$ mm EX exhaust side $: 0.17 \pm 0.02$ mm

ADJUSTING

NEEDLE-NOSE PLIERS

- 1) Loosen lock nut, rotate adjust screw to adjust specified valve clearance. After adjusting, tighten lock nut while fixing adjust nut screw. After tighten lock nut, check out valve clearance again. (TORQUE: 9.0N·m)
- 2)Check each hole cap O ring condition, please change if needed, apply engine oil to O ring, then install valve adjust hole cap, cam sprocket cover, crankshaft hole cap and timing hole cap.

(TORQUE/ crank shaft hole cap:8.0N⋅m / timing hole cap: 6.0N⋅m)

ADJUST COMPRESSION TOP DEAD CENTER / VALVE CLEARANCE.

Adjust valve clearance to compression top dead center position(matches each matching mark.)

