

OIL FILTER COVER (HONDA type-1)

CODE

RED : 390-1001020 | BLACK : 390-1001050 | GUNMETAL GRAY : 390-1001090

APPLICATION : GROM (JC92) / MONKEY 125 (JB03) / DAX 125 (JB04) / SUPER CUB C125 (JA58) / SUPER CUB 50 / -PRO (AA09/07) / CROSS CUB 50 (AA06) / SUPER CUB 110 / -PRO (JA59/44/42) / CROSS CUB 110 (JA60/45)

- Thank you for purchasing Kitaco product.

Read and understand the instruction before installing.

ATTENTION (MUST READ)

- This product is designed and made exclusive for application vehicles, do not use other models. Do not modify the way which is not listed or it will cause damage and trouble.
 - We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
 - Please ask authorized mechanic for assembling and setting.
 - Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- ※ Metal/resin/alumite products get discolored/rust for ages as well as how to use. Please understand when using.

HOW TO INSTALL

- 1) Remove oil level gauge/ oil filler cap to ease drain oil.
 - 2) Remove oil drain bolt, then drain the oil.
 - 3) Apply engine oil to attached O ring, washer, then install to specified position (groove).
 - 4) Install new drain washer, tighten drain bolt with specified torque (according to models).
- ※ According to washer shape, it might have specified direction. Be careful of it.
- 5) Remove genuine oil strainer cap, then check and wash the strainer.
 - 6) Apply a little grease or engine oil to new oil element rubber seal (O ring).
 - 7) Install filter and spring to crank case.
 - 8) Tighten Kitaco filter cover with O ring with specified torque. (For more details, refer to the how to install oil filter cover.)
 - 9) Pour specified amount of engine oil.
 - 10) Start engine with low speed (idling), make sure not to leak oil.

HOW TO INSTALL OIL FILTER COVER

- If there is a hard degradation like a blem, fatigue and wear etc on the reuse parts, please change to new ones.
- Remove genuine cap. (Refer to the illustration below.)
- Install O ring to Kitaco cap. ※ Apply engine oil or grease.
- Tighten oil filter cover with specified torque. (Be careful not to overtighten.)
- Make sure not to loosen any parts before test ride.


ATTENTION!

Install O ring correctly to specified position (groove).

If you tighten out side of the groove, it might cause of oil leak.

※ Illustration is just a reference. The actual shape, place of use, quantity, etc. is according to models.

Apply a little engine oil or grease to O ring. ※ If it is hard to remove filter, use pliers and R crank case cover notch to remove.

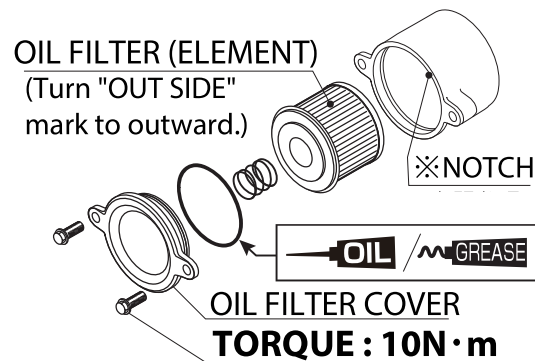

ATTENTION!

Do not hurt R crank case cover O ring install place. (It might cause of oil leak.)

PACKING LIST

NAME	CODE	QTY	TORQUE
OIL FILTER COVER	-	1	COVER BOLT:10N·m
FILTER COVER O RING : OH-06	70-967-31060	1	