

INITIAL ADJUSTER SET

CODE : 502-1470100

APPLICATION : CT125 HUNTER CUB (JA55 / 65)

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

ATTENTION (MUST READ)

- This product is designed and made exclusive for CT125 HUNTER CUB (JA55 / 65), do not use other models.
 - We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
 - Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
 - Refer to the manufacturer service manual when installation.
 - Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- *This product is alumite finished. However, it might get discolored by ultraviolet light, etc.

PACKING LIST

FIGURE	NAME	CODE	QTY
1	INITIAL ADJUSTER	-	x2
2	SPRING COLLAR	502-1470104	x2

HOW TO INSTALL INITIAL (SPRING PRELOAD) ADJUSTER

- *Reuse stock O ring.
- When changing collar inside the front fork, pull up the stock collar with magnet tool.
- *Depending on the handle shape or position, unable to adjust without removing handle.

HOW TO ADJUST

- By rotating 10mm width adjuster on the middle of initial adjuster to adjust spring compression amount (strength). (Rotate H direction to make preload to harder, S direction to softer.)
- **ADJUSTMENT RANGE ADJUSTER** : 1 ROTATE 1mm (1 scale around 2mm)
(JA55) : -3 ~ +12mm
(JA65) : -5 ~ +10mm
- ***FACTORY SETTING** : (H direction) 5mm

231110 Y-H

3-8-13 NAGATA, HIGASHI
OSAKA, OSAKA, JAPAN
<https://www.kitaco.co.jp/>

