

<b>POCKET INNER CUSHION SET</b> No,1/1		APPLICATION : Dio110 (JF58)
CODE	(BLUE) 006-1437100	(BLACK) 006-1437200

●Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

**ATTENTION (MUST READ)**

- Do not modify the way which is not listed or it will cause damage and trouble.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting.
- Refer to the manufacturer service manual when installation.
- Bolts, strings, tape, etc may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.

**ATTENTION**


- This product is for cushioning the things inside front inner rack from riding vibration, collision, scratch, etc. Not for damage prevention and shock absorber. Do not use with luxury goods, precision equipment.
- Storing sharp thing may cause of break this product.
- This product gets ages, discolored and deformation (not resistance) for ages. Please understand before installation.
- FLAMMABLE : Do not use with fire and high heat things.
- Do not over weight. It might cause of break.

**HOW TO INSTALL FRONT POCKET INNER CUSHION**  
PROCESS 1)


Firstly, make installation situation by using only inner cushion not to install to vehicle.

Make sure the shape of front inner rack inside and A,B,C surface position. Then expand again. (Continue to process 2)

PACKING LIST	
NAME	QTY
INNER CUSHION	×1

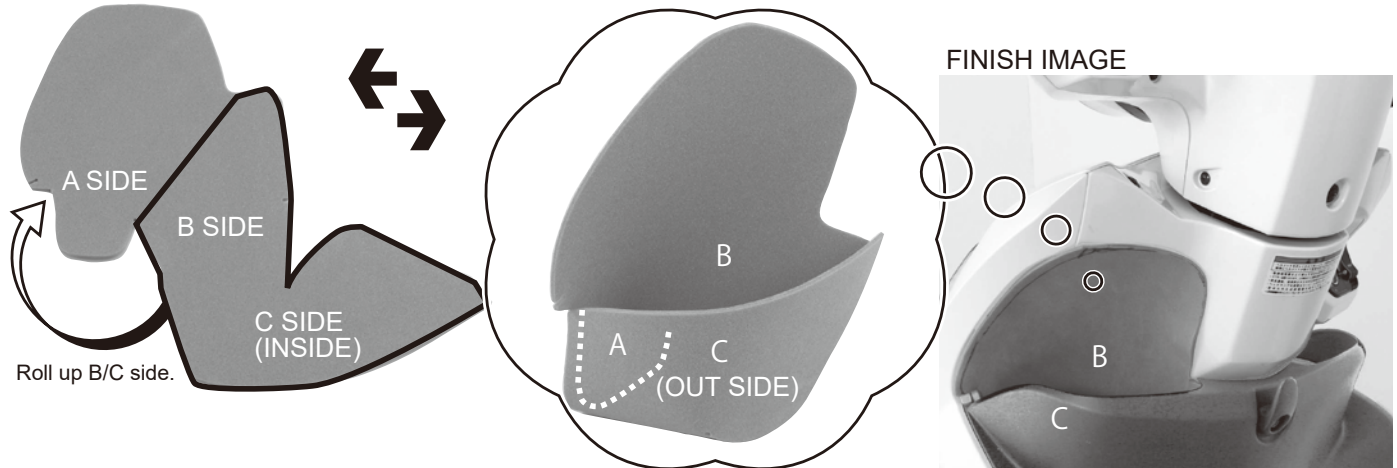


PROCESS 2) Follow the numbers of 3sides and layer to wrap.

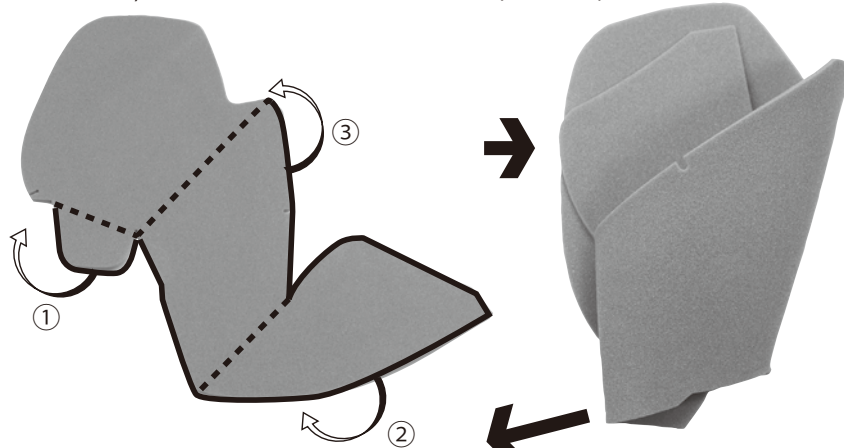

PROCESS 5)

Adjust each sides of inner cushion, then attach double sided tape to back side of D side to attach to finish installation.

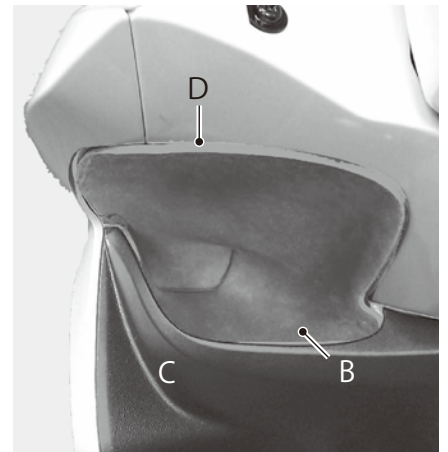

PROCESS 3)

Insert to L front inner rack with layer to wrap. (Continue to process 4)



PROCESS 4)

Expand to match the shape of front inner rack with inner cushion B and C side to along the inner wall.



Where to attach double sided tape

