

KITACO SHOCK ABSORBER

APPLICATION : CT125 HUNTER CUB (JA55)

CODE (SPRING COLOR)

(RED) 520-1470020

(GRAY METALIC) 520-1470090

REMARK: ● FREE LENGTH 362mm (SAME AS GENUINE) ● PRELOAD : NON-STEP ● BLACK BODY ● 1PC

- Thank you for purchasing KITACO product.
Read and understand the instruction before installing.

ATTENTIONS (MUST READ)

- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the surrounding parts.
- We are not responsible for damages and accidents caused by assembling mistake and improper setting.
- After the installation, the steering stability has changed compare to the normal rear shock, please drive safely.
- When installing, please refer to the manufacturer service manual.
- Bolts and nuts may get loosen by engine vibration.
- ※ Metal/resin products get discolored/rust for ages as well as how to use. Please understand when using.

HOW TO INSTALL

※If there is a hard degradation like scratch, setting, friction, etc on the reuse parts, please change to new ones.

- 1) Secure the motorcycle body, by placing the maintenance stand.
- 2) Remove body plastics, if necessary. (Make sure to refer to manufacturer service manual when removing plastics.)
- 3) Remove genuine rear shock, install KITACO rear shock.


※ UPPER/LOWER mounting bolts with designated torque.

UPPER/LOWER : NUT 29N·m(2.9kgf·m)

- 4) Adjust each part, making sure that the rear shock is stable before riding.

ADJUSTING NON-STEP PREROAD

Adjust the preload position, by losing lock nut. Fasten the lock nut by pin spanner after adjustment.

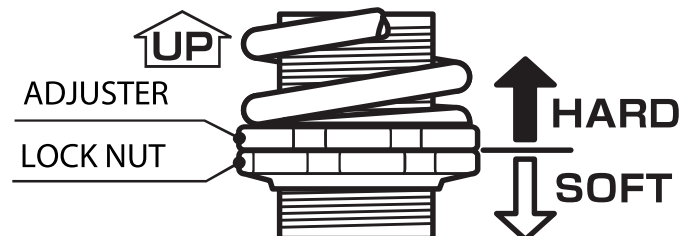

OPTIONAL PARTS	CODE
PIN SPANNER 150mm(Φ40~60)	674-0500801
HOOK WRENCH (φ32~75)	674-0500850
ADJUSTABLE HOOK WRENCH (φ35~75)	674-0500880

200413

KITACO
株式会社 キタコ

〒 577-0015

3-8-13

NAGATA, HIGASHI-
OSAKA, OSAKA, JAPAN