

# SILENCER HEAT GUARD

APPLICATION : ADV150(KF38)/160(KF54)

CODE : (BLACK) 549-1460050 (SILVER) 549-1460060

- Thank you for purchasing Kitaco product. Read and understand the instruction before installing.


## ATTENTION (MUST READ)

- This product is for dress-up, minimize burning, etc from muffler heat. (Unable to perfectly prevent.) Do not use for other purposes.
  - Do not modify the way which is not listed or it will cause damage and trouble.
  - We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
  - Please ask authorized mechanic for assembling and setting.
  - Refer to the manufacturer service manual when installation.
  - Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- ※ Metal/resin/alumite products get discolored/rust for ages as well as how to use. Please understand when using.


※ Make sure silencer, etc are completely cool before installation.

- Remove stock silencer guard. (Refer to the illustration.)
- Install silencer heat guard with stock bolts.

STOCK SILENCER GUARD  
(Reuse stock bolt)

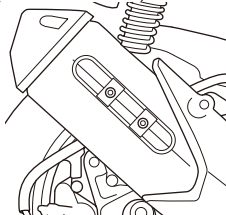

KITACO HEAT GUARD  
(TORQUE : 10N·m)

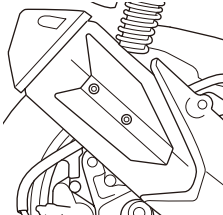

## ATTENTION!

This product is made from aluminum. A lot of riding may cause of discolored of heat guard surface by heat, but it is not abnormal. For removing heat guard burning, try commercial chemical to use. (It might remove alumite, be careful of it.) If starting engine with grease or dirt attached, it burned (discolored) differently. Clean the grease and dirt (touched by gloove or hand) before starting engine.



3-8-13 NAGATA,  
HIGASHI-OSAKA, OSAKA, JAPAN

200207 Y-H