

CARBON TANK PAD

CODE : 692-1432000

APPLICATION : GROM (JC61)

Read and understand the instruction before installing. Please keep the instruction for later needs.

■ ATTENTIONS (MUST READ)

- CARBON TANK PAD is designed and made exclusive for GROM, do not use on other models.
- Do not modify the way which is not listed or it will cause damage and trouble.
- We are not responsible for damages and accidents caused by assembling mistake and improper setting.
- Please ask mechanic for assembling and setting.

Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.

- Refer to the manufacturer HONDA service manual when installation

- Bolts and nuts may get loosen by engine vibration.

Please check and make sure each part of bolts and nuts are not loose before running.

- CFPR is easy to burn. Evacuate immediately when it is on fire, by accident or anything.

- Wear work gloves when installing as fibers of visor might prick on fingers.

- Use compound wax for surface scratches.

- Do not operate in inadequately-ventilated room.

Vaporized resin and hardening agent might be in the room, which is harmful to human body.

- This instruction sheet is for the instruction with stock condition.

- Please contact a mechanic nearby immediately when you find something unusual.

PACKING LIST

記号	NAME	QTY
-	CARBON TANK PAD	× 1
-	BOTH-SIDED TAPE L250mm	× 1

HOW TO INSTALL

※ Taking off the seat before installing CARBON TANK PAD.

1) With seat installed, attach tank pad on fuel tank temporarily.

※ If tank pad touches seat, it should be scraped to avoid hurting seat surface.

2) Degrease and remove wax on the surface of tank pad. Attach divided both-sided tape to specified place.

(Refer to below illustration)

※ Please attach the tape little by little, removing paper liner little by little

(It is not possible to reattach both-sided tape once attached completely,

as the both-sided tape has excellent adhesive power.)

3) Degrease and remove wax on the surface of fuel tank.

4) Attach carbon meter visor temporarily. If attached tightly, the tape sticks really strong to the products, which might cause break the tank pad.

5) Pull the paper liner out, attach tank pad tightly to tank body.

6) Install seat.



Both-sided tape attaching place

Both-sided tape should be attached to the place which touches with cover and visor.

BENDING UP THE PAPER LINER

Bend up 1cm of paper liner of both-side tape.

Pull out the paper liner as soon as the attaching position is decided.

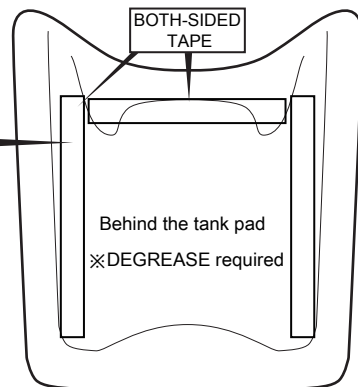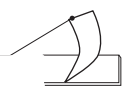

131023

3-8-13 NAGATA
HIGASHI-OSAKA,
OSAKA, 577-0015,



CARBON TANK PAD

CODE : 692-1432000

APPLICATION : GROM (JC61)

Read and understand the instruction before installing. Please keep the instruction for later needs.

■ ATTENTIONS (MUST READ)

- CARBON TANK PAD is designed and made exclusive for GROM, do not use on other models.
- Do not modify the way which is not listed or it will cause damage and trouble.
- We are not responsible for damages and accidents caused by assembling mistake and improper setting.
- Please ask mechanic for assembling and setting.

Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.

- Refer to the manufacturer HONDA service manual when installation

- Bolts and nuts may get loosen by engine vibration.

Please check and make sure each part of bolts and nuts are not loose before running.

- CFPR is easy to burn. Evacuate immediately when it is on fire, by accident or anything.

- Wear work gloves when installing as fibers of visor might prick on fingers.

- Use compound wax for surface scratches.

- Do not operate in inadequately-ventilated room.

Vaporized resin and hardening agent might be in the room, which is harmful to human body.

- This instruction sheet is for the instruction with stock condition.

- Please contact a mechanic nearby immediately when you find something unusual.

PACKING LIST

記号	NAME	QTY
-	CARBON TANK PAD	× 1
-	BOTH-SIDED TAPE L250mm	× 1

HOW TO INSTALL

※ Taking off the seat before installing CARBON TANK PAD.

1) With seat installed, attach tank pad on fuel tank temporarily.

※ If tank pad touches seat, it should be scraped to avoid hurting seat surface.

2) Degrease and remove wax on the surface of tank pad. Attach divided both-sided tape to specified place.

(Refer to below illustration)

※ Please attach the tape little by little, removing paper liner little by little

(It is not possible to reattach both-sided tape once attached completely,

as the both-sided tape has excellent adhesive power.)

3) Degrease and remove wax on the surface of fuel tank.

4) Attach carbon meter visor temporarily. If attached tightly, the tape sticks really strong to the products, which might cause break the tank pad.

5) Pull the paper liner out, attach tank pad tightly to tank body.

6) Install seat.



Both-sided tape attaching place

Both-sided tape should be attached to the place which touches with cover and visor.

BENDING UP THE PAPER LINER

Bend up 1cm of paper liner of both-side tape.

Pull out the paper liner as soon as the attaching position is decided.

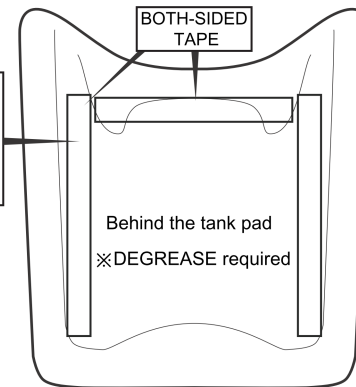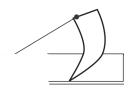

131023

3-8-13 NAGATA
HIGASHI-OSAKA,
OSAKA, 577-0015,

